

CR Marine Mooring Snubber



Instructions


1. Determine location of snubber on the line
2. Thread line through holes as indicated. Wrap 1 (calm) to 3 (extreme) turns depending on tidal and wave conditions. **DO NOT WRAP MORE THAN 3 TIMES**, as this could strain the snubber and shorten its useful life.
3. Double check snubber placement and that lines have been threaded properly. Pull hard on the line to force it securely down between locking elements.

NOTE: It is recommended to have a snubber on every line.



Certified to ISO 9001:2000,
Including Design

Suggested Mooring Configurations Using CR Marine Snubbers

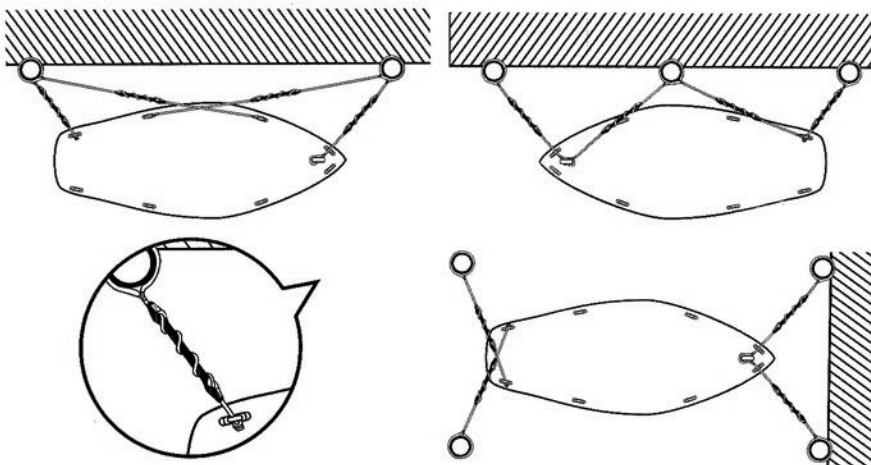

Part No. Line

101667	3/8"
101692	1/2" to 5/8"
101666	5/8" to 3/4"
101693	3/4" to 1"



Custom Rubber Corp

Responsiveness~ From Design to Delivery

1274 E. 55th Street, Cleveland, OH 44103-1029

216-391-2928 (Phone) 216-391-4761 (Fax)

www.customrubbercorp.com/CRmarine.htm